

# **FAST**

**FLEXEEL<sup>®</sup>** Assembly Tool

## **The Perfect Partner for Flexeel Air Hoses!**

*Don't let the unexpected keep your crew down. The Flexeel Assembly Tool (FAST) allows for quick air hose repairs on the job site. This all-metal hand tool works with our entire line of Flexeel air hoses. The tool kit contains everything you need to make repairs in less than a minute! Our FAST repair kit includes a hardcover case for easy storage.*



**Designed  
for use with  
FLEXEEL  
Polyurethane  
Air Hose**

See full how-to  
video at



- Quickly and easily inserts fitting into hose end for fast, easy repair
- Engineered for ease of use
- Expands hose life and cuts downtime
- Three arbors for use with 1/4", 5/16", and 3/8" Flexeel hoses
- Tubing cutter to ensure clean, square cut for repair
- Short arm hex key used to attach and detach arbors



**COILHOSE PNEUMATICS**

19 Kimberly Road | East Brunswick, NJ 08816  
Ph: 732 390 8480 Fax: 732 390 9693  
info@coilhose.com




## Step 1 Cut off damaged hose

Locate the leak in your Flexeel<sup>®</sup> hose and use the tubing cutter tool to cut off the damaged section. Make sure your cut is square for a strong seal.




## Step 2 Remove strain relief and fitting

Use two wrenches to separate the brass fitting from the strain relief. Put the strain relief back on the good section of air hose.

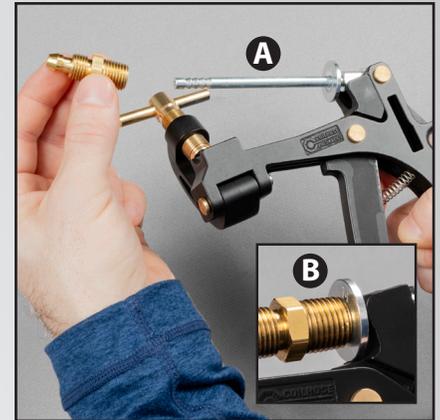

## Step 3 Install arbor and brass fitting

Install the appropriate sized arbor (A) on the tool. Slide the brass fitting onto the arbor, pushing it against the pressure plate (B).

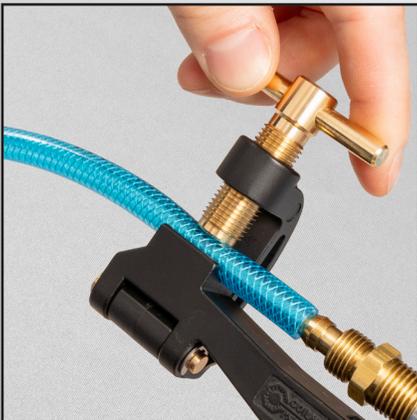

## Step 4 Clamp hose in nest

Slide the hose onto the arbor, seating it on the brass fitting. Dip hose end in a water-based lubricant. Align the hose in the nest, swing over the top of the tool and clamp the hose in place.



## Step 5 Squeeze tool handle

Squeeze the tool handle twice. Inspect to see that the hose is over the barbs and has properly seated itself against the body of the fitting.



## Step 6 Reconnect strain relief

Slide the strain relief back up and screw it onto the brass fitting. Once tight, give a little pull to untwist the hose on the fitting and you are ready to go.